


## 9590 Stand Installation Guide

*Flex Stand Components (PN 46-00709)*



*Figure 1. Stand Components*

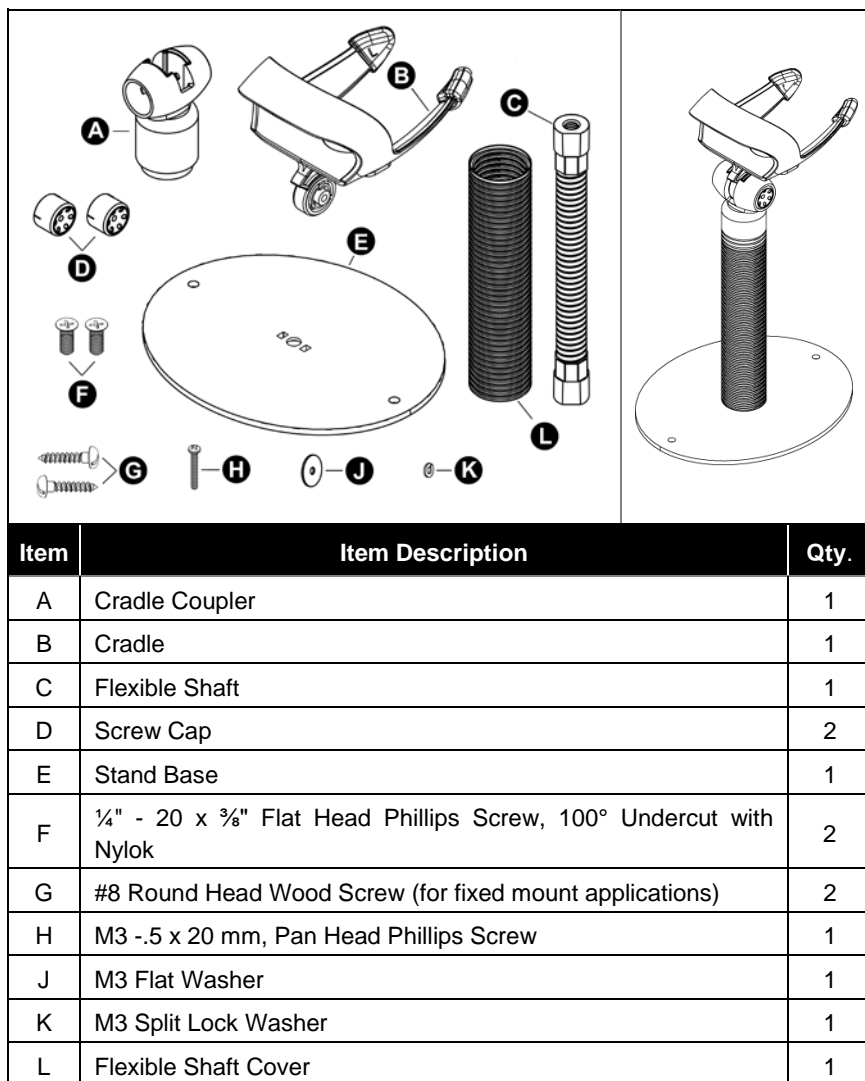

00-05249 Rev C  
2/12

## Flex Stand Assembly (PN 46-00709)

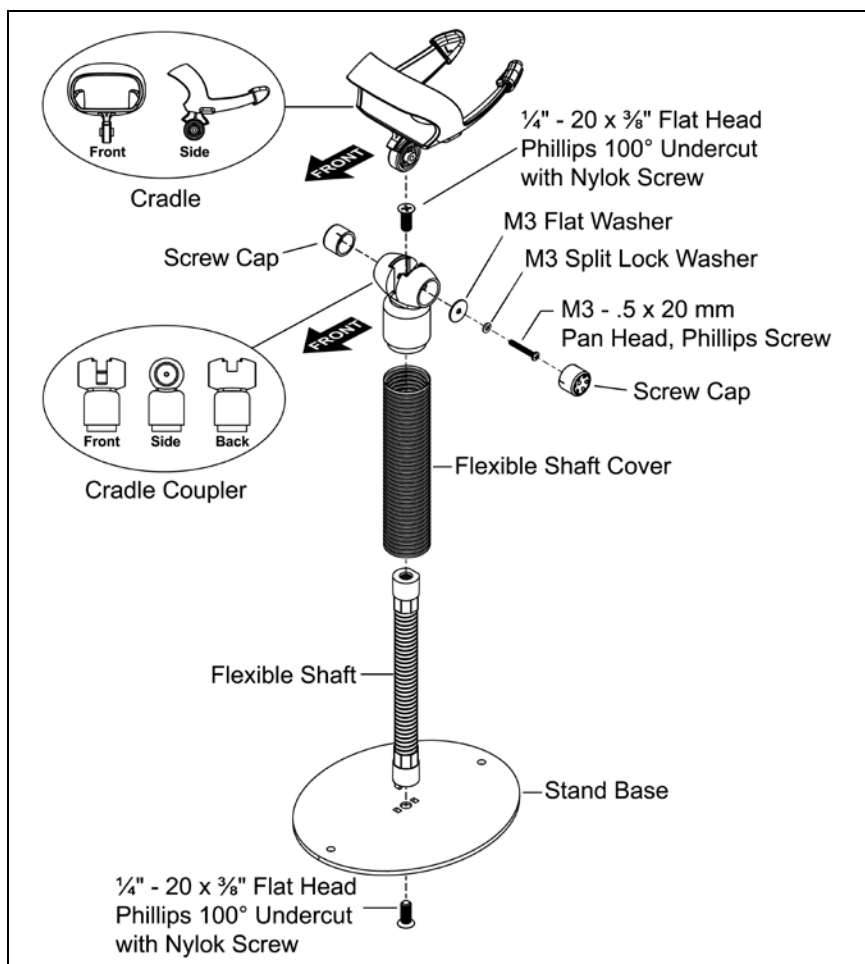


Figure 2. Stand Assembly

### Optional Flex Stand Fixed Mount (PN 46-00709)

1. In the kit, two #8 wood screws have been provided for fixed mount applications.
2. When choosing the stand location, make sure to consider the front orientation of the stand (indicated in *Figure 3*).
3. On a centerline, drill two #39 pilot holes in the countertop spaced 125 mm (4.92") apart. The stand base can be used as a guide for the spacing of the pilot holes.
4. Secure the stand base to the countertop with the two #8 wood screws provided.

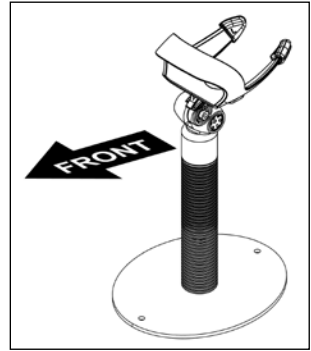


Figure 3.

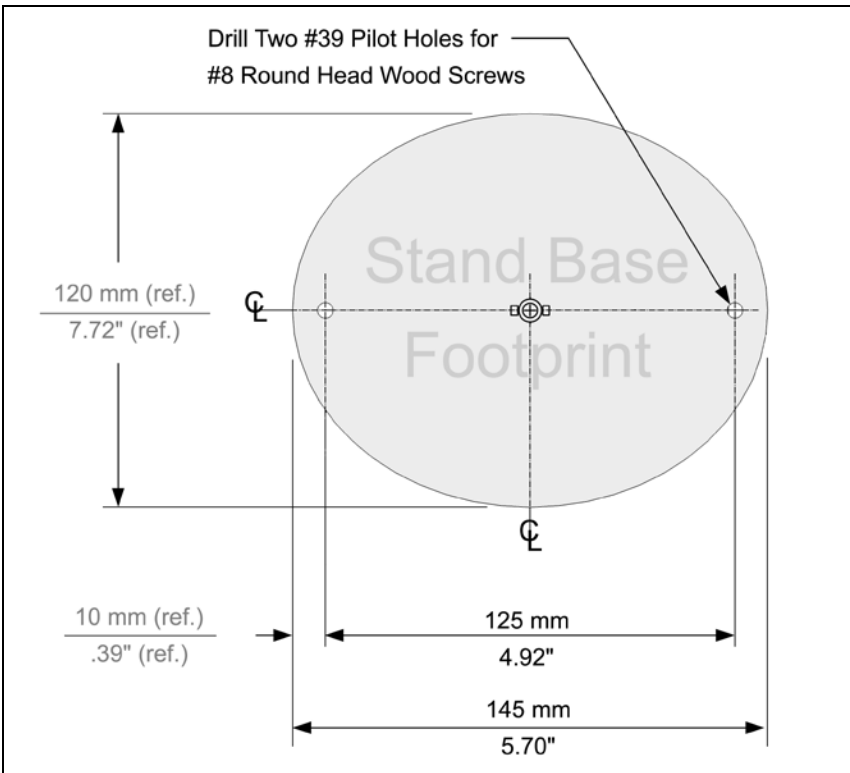


Figure 4. Stand Base Hole Pattern (Not to Scale)

## Optional Wall/Tabletop Stand (PN 46-00885)

### To fix mount the stand to the wall:

1. Drill two #39 pilot holes in the wall spaced 39 mm (1.54") apart on a horizontal centerline.
2. Install one #8 wood screw in each of the pilot holes, leaving a space between the head of the screw and the wall surface.
3. Locate the two slots marked as "A" on the stand base in *Figure 5*.
4. Match the "A" slots on the stand to the heads of the installed wood screws.
5. Slide the stand over the screw heads and down to lock the stand in place.

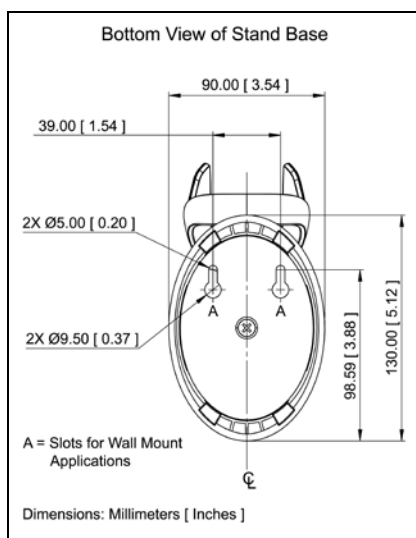


Figure 5.

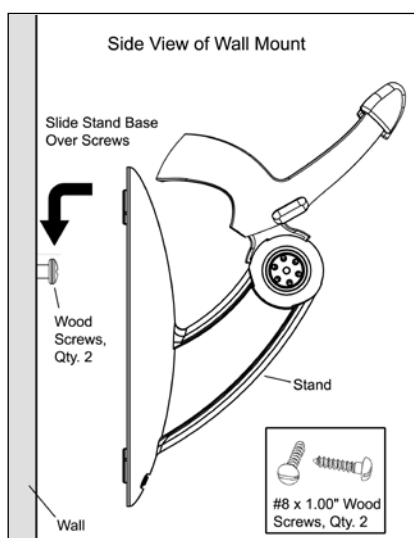


Figure 6.

### Cradle Angle Warning

